


5335A, 5335D, 5337A & 5337D

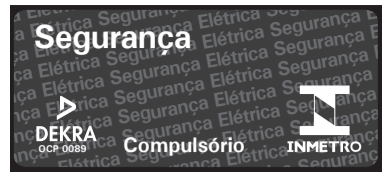

DK ADVARSEL

Følgende operationer bør kun udføres på modulet i spændingsløs tilstand og under ESD-sikre forhold. Installation, ledningsmontage og -demontage. Fejlfinding på modulet. Reparation af modulet må kun foretages af PR electronics A/S.

DK ADVARSEL

PR Loop Link programmeringsenheden må ikke benyttes til kommunikation med moduler installeret i Ex-område. Enhederne skal installeres i henhold til den tilhørende installations vejledning ved montering i eksplosionsfarligt område.

DK SIKKERHEDSREGLER

Modtagelse og udpakning
Udpak modulet uden at beskadige det. Kontrollér ved modtagelsen, at modultypen svarer til den bestilte. Indpakningen bør følge modulet, indtil dette er monteret på blivende plads.

DK Miljøforhold

Undgå direkte sollys, kraftigt støv eller varme, mekaniske rystelser og stød, og udsæt ikke modulet for regn eller kraftig fugt. Om nødvendigt skal opvarmning, ud over de opgivne grænser for omgivelsestemperatur, forhindres ved hjælp af ventilation.

DK Installation

Modulet må kun tilsluttes af kvalificerede teknikere, som er bekendte med de tekniske udtryk, advarsler og instruktioner i installationsvejledningen, og som vil følge disse. Hvis der er tvivl om modulets rette håndtering, skal der rettes henvendelse til den lokale forhandler eller alternativt direkte til PR electronics A/S. Installation og tilslutning af modulet skal følge landets gældende regler for installation af elektrisk materiel bl.a. med hensyn til ledningstærskning, og sikring og placering. Beskrivelse af indgang/udgangsforsyningsforbindelser findes i produktmanualen, som kan hentes på www.prellectronics.dk.

DK Kalibrering og justering

Under kalibrering og justering skal måling og tilslutning af eksterne spændinger udføres i henhold til denne installationsvejledning, og teknikeren skal benytte sikkerhedsmæssigt korrekte værktøjer og instrumenter.

DK Rengøring

Modulet må i spændingsløs tilstand, rengøres med en klud let fugtet med destilleret vand.

DK PC-programmering af SYSTEM 5300

Modulet konfigureres til den aktuelle opgave ved hjælp af en PC og PR electronics A/S kommunikationsinterface Loop Link. Det er muligt at konfigurere modulet både med og uden tilsluttet forsyningsspænding, idet kommunikationsinterface leverer nødvendig forsyning til opsettningen. Kommunikationsinterface er galvanisk isoleret, så PC'ens port er optimalt beskyttet. Kommunikationen er 2-vejs, så modulets opsettning kan hentes ind i PC'en, og opsettningen i PC'en kan sendes til modulet. For de brugere, der ikke selv vil foretage opsettning, kan modulet leveres konfigureret efter oplyst specifikation: indgangstype, måleområde, følerleddetektering og udgangssignal.

DK Elektriske specifikationer

| | |
|----------------------------------------|-----------------------|
| Specifikationsområde..... | -40°C til +85°C |
| Forsyningsspænding, 5335A & 5337A..... | 8,0...35 VDC |
| Internt effekttab, 5335A & 5337A..... | 25 mW...0,8 W |
| Forsyningsspænding, 5335D & 5337D..... | 8,0...30 VDC |
| Internt effekttab, 5335D & 5337D..... | 25 mW...0,7 W |
| Isolationsspænd, test/oper..... | 1,5 kVAC / 50 VAC |
| Kalibreringstemperatur..... | 20...28°C |
| Relativ fugtighed..... | < 95% RH (ikke kond.) |
| Mål..... | Ø44 x 20,2 mm |
| Kapslingsklasse (hus/klemme)..... | IP68 / IP00 |

DK Indgangstyper

| | |
|-----------------|------------------------------------------|
| Pt100..... | -200°C...+850°C |
| NI100..... | -60°C...+250°C |
| TC-indgang..... | B, E, J, K, L, N, R, S, T, U, W3, W5, Lr |
| Lin. R..... | 0 Ω...7000 Ω |
| Spænding..... | -800...+800 mV |

DK Strømodgang


| | |
|-----------------------------|-------------------------|
| Signalområde..... | 4...20 mA |
| Min. signalområde..... | 16 mA |
| Belastningsmodstand, Ω..... | ≤ (Vforsyn-8,0 V)/0,023 |

DK Godkendelser

| | |
|------------------|--------------------------|
| DNV, Marine..... | TAA0000101 |
| EAC Ex..... | RU C-DK, HA65.B.00355/19 |

DK Overholdte myndighedskrav:

| | |
|-------------|----------------|
| EMC..... | 2014/30/EU |
| RoHS..... | 2011/65/EU |
| ATEX..... | 2014/34/EU |
| EAC..... | TR-CU 020/2011 |
| EAC Ex..... | TR-CU 012/2011 |

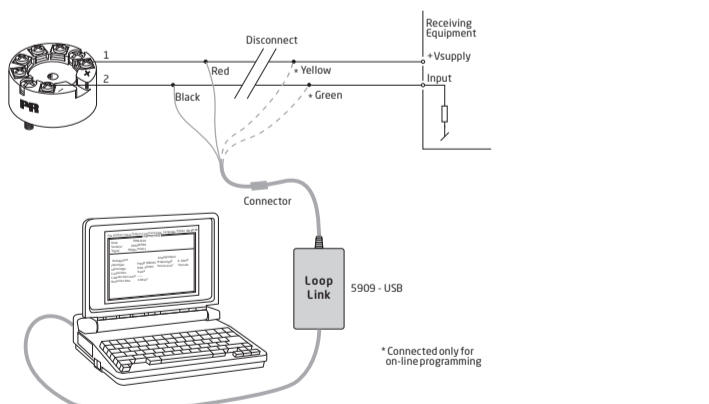

- DK** Loop Link er et kommunikationsinterface, der er nødvendigt for programmering af 53xx. Loop Link må ikke benyttes til kommunikation med moduler installeret i Ex-område.
- UK** Loop Link is a communications interface that is needed for programming 53xx. Loop link is not approved for communication with devices installed in hazardous (Ex) areas.
- FR** Loop Link est un kit de programmation permettant de programmer le 53xx. Loop Link ne doit pas être utilisé pour communication avec des modules installés en zone dangereuse.
- DE** Loop Link ist eine Schnittstelle zur Programmierung des 53xx. Loop Link darf nicht zur Kommunikation mit Geräten, die in Ex-gefährdeten Bereichen installiert sind, benutzt werden.

- DK** Godkendelser
- UK** Approvals
- FR** Approbations
- DE** Zulassungen
- BR** Aprovações

| | ATEX | Area / Zone | Installation drawing | IECEX | Area / Zone | Installation drawing | FM | Zone / Div. | Installation drawing | CSA | Zone / Div. | Installation drawing | INMETRO | Area | Installation drawing |
|---------------|--------------------|---------------------|----------------------|--------------|--------------------|----------------------|-------------|--------------------|----------------------|---------|--------------------|----------------------|----------------|------------------------|----------------------|
| 5335A & 5337A | DEKRA 20ATEX0109 X | 2, 22 | 5335QA02 | DEK 20.0063X | 2, 22 | 5335QI02 | | | | 1125003 | 2 / Div 2 | 5337QC02 | DEKRA 18.0002X | 2, 22 | 5335QB01 |
| 5335D & 5337D | DEKRA 20ATEX0108 X | 0, 1, 2, 21, 22, M1 | 5335QA01 | DEK 20.0063X | 0, 1, 2, 21, 22, M | 5335QI01 | FM17U50013X | 0, 1, 2 / Div 1, 2 | 5300Q502 | 1125003 | 0, 1, 2 / Div 1, 2 | 533XQC03 | DEKRA 18.0002X | 0, 1, 2, 20, 21, 22, M | 5335QB01 |

DK Dokumentation, godkendelser og yderligere information findes på internettet på www.prellectronics.dk

UK WARNING

The following operations should only be carried out on a disconnected device and under ESD safe conditions: General mounting, connection and disconnection of wires. Troubleshooting the device. Repair of the device must be done by PR electronics A/S only.

UK WARNING

Do not use the Loop Link programming interface to program the units in Ex area. For installation in classified area the modules must be installed according to the appropriate installation drawings.

UK SAFETY INSTRUCTIONS

Receipt and unpacking
Unpack the device without damaging it. The packing should always follow the device until this has been permanently mounted. Check at the receipt of the device whether the type corresponds to the one ordered.

UK Environment

Avoid direct sunlight, dust, high temperatures, mechanical vibrations and shock, as well as rain and heavy moisture. If necessary, heating in excess of the stated limits for ambient temperatures should be avoided by way of ventilation.

UK Mounting

Only qualified technicians who are familiar with the technical terms, warnings, and instructions in this installation guide and who are able to follow these should connect the device. Should there be any doubt as to the correct handling of the device, please contact your local distributor or, alternatively, PR electronics A/S. Mounting and connection of the device should comply with national legislation for mounting of electric materials, i.e. wire cross section, protective fuse, and location. Descriptions of input / output and supply connections are shown in the product manual found on www.prellectronics.com.

UK Calibration and adjustment

During calibration and adjustment, the measuring and connection of external voltages must be carried out according to the specifications of this installation guide. The technician must use tools and instruments that are safe to use.

UK Cleaning

When disconnected, the device may be cleaned with a cloth moistened with distilled water.

UK PC programming of SYSTEM 5300

The device is configured to the present task by way of a PC and PR electronics A/S communications interface Loop Link. The device can be configured with or without a connected supply voltage as the communications interface supplies the necessary voltage to the set-up. The communications interface is galvanically isolated to protect the PC port. Communication is 2-way to allow the retrieval of the device set-up into the PC and to allow the transmission of the PC set-up to the device. For users who do not wish to do the set-up themselves, the device can be delivered configured according to customer specifications: input type, measurement range, sensor error detection, and output signal.

UK Electrical specifications

| | |
|------------------------------------------------|----------------------|
| Specifications range..... | -40°C to +85°C |
| Supply voltage, 5335A & 5337A..... | 8,0...35 VDC |
| Internal power dissipation, 5335A & 5337A..... | 25 mW...0,8 W |
| Supply voltage, 5335D & 5337D..... | 8,0...30 VDC |
| Internal power dissipation, 5335D & 5337D..... | 25 mW...0,7 W |
| Isolation voltage, test/oper..... | 1,5 kVAC / 50 VAC |
| Calibration temperature..... | 20...28°C |
| Relative humidity..... | < 95% RH (non-cond.) |
| Dimensions..... | Ø44 x 20,2 mm |
| Protection degree (encl./terminal)..... | IP68 / IP00 |

UK Input types

| | |
|---------------|------------------------------------------|
| Pt100..... | -200°C...+850°C |
| NI100..... | -60°C...+250°C |
| TC input..... | B, E, J, K, L, N, R, S, T, U, W3, W5, Lr |
| Lin. R..... | 0 Ω...7000 Ω |
| Voltage..... | -800...+800 mV |

UK Current output

| | |
|-------------------------|-------------------------|
| Signal range..... | 4...20 mA |
| Min. signal range..... | 16 mA |
| Load resistance, Ω..... | ≤ (Vsupply-8,0 V)/0,023 |

UK Approvals

| | |
|------------------|--------------------------|
| DNV, Marine..... | TAA0000101 |
| EAC Ex..... | RU C-DK, HA65.B.00355/19 |

UK Observed authority requirements:

| | |
|-------------|----------------|
| EMC..... | 2014/30/EU |
| RoHS..... | 2011/65/EU |
| ATEX..... | 2014/34/EU |
| EAC..... | TR-CU 020/2011 |
| EAC Ex..... | TR-CU 012/2011 |

FR AVERTISSEMENT

Les opérations suivantes doivent être effectuées avec le module débranché et dans un environnement exempt de décharges électrostatiques (ESD): montage général, raccordement et débranchement de fils et recherche de pannes sur le module. Seule PR electronics SARL est autorisée à réparer le module.

FR AVERTISSEMENT

Ne pas utiliser le kit de programmation "Loop Link" en zone classée dangereuse Ex. Pour des installations en zone classée, les modules doivent être montés conformément aux plans appropriés.

FR CONSIGNES DE SECURITE

Réception et déballage
Déballer le module sans l'endommager. Il est recommandé de conserver l'emballage du module tant que ce dernier n'est pas définitivement monté. A la réception du module, vérifiez que le type de module reçu correspond à celui que vous avez commandé.

FR Environnement

N'exposez pas votre module aux rayons directs du soleil et choisissez un endroit à humidité modérée et à l'abri de la poussière, des températures élevées, des chocs et des vibrations mécaniques et de la pluie. Le cas échéant, des systèmes de ventilation permettent d'éviter qu'une pièce soit chauffée au-delà des limites prescrites pour les températures ambiantes.

FR Montage

Il est conseillé de réserver le raccordement du module aux techniciens qualifiés qui connaissent les termes techniques, les avertissements et les instructions de ce guide et qui sont capables d'appliquer ces dernières. Si vous avez un doute quelconque quant à la manipulation du module, veuillez contacter votre distributeur local. Vous pouvez également vous adresser à PR electronics SARL. Le montage et le raccordement du module doivent être conformes à la législation nationale en vigueur pour le montage de matériaux électriques, par exemple, diamètres des fils, fusibles de protection et implantation des modules. Les connexions des alimentations et des entrées / sorties sont décrites dans le manuel du produit sur www.prellectronics.fr.

FR Etalonnage et réglage

Lors des opérations d'étalonnage et de réglage, il convient d'effectuer les mesures et les connexions des tensions externes en respectant les spécifications mentionnées dans ce guide. Les techniciens doivent utiliser des outils et des instruments pouvant être manipulés en toute sécurité.

FR Maintenance et entretien

Une fois le module hors tension, prenez un chiffon imbibé d'eau distillée pour le nettoyer.

FR Programmation par PC du SYSTEME 5300

Le module peut être programmé en fonction d'une application donnée à partir d'un PC et le kit de programmation Loop Link de PR electronics A/S. Le module peut être programmé sans être alimenté car l'interface de communication fournit l'alimentation nécessaire pour la configuration. L'interface de communication est dotée d'une isolation galvanique pour protéger le port du PC. La communication est bidirectionnelle. Cela permet non seulement la programmation du module mais également la récupération d'une configuration existante ainsi que la lecture du numéro de série et du repère. Le module peut être livré déjà programmé, si l'utilisateur le souhaite.

FR Spécifications

| | |
|--------------------------------------------|-----------------------|
| Plage de température..... | -40°C à +85°C |
| Tension d'alimentation, 5335A & 5337A..... | 8,0...35 Vcc |
| Puissance dissipée, 5335A & 5337A..... | 25 mW...0,8 W |
| Tension d'alimentation, 5335D & 5337D..... | 8,0...30 Vcc |
| Puissance dissipée, 5335D & 5337D..... | 25 mW...0,7 W |
| Tension d'iso. test/opér..... | 1,5 kVca / 50 Vca |
| Température d'étalonnage... .. | 20...28°C |
| Humidité relative..... | < 95% HR (sans cond.) |
| Dimensions..... | Ø44 x 20,2 mm |
| Degré de protection (boîtier/bornier)..... | IP68 / IP00 |

FR Types d'entrée

| | |
|----------------|------------------------------------------|
| Pt100..... | -200°C...+850°C |
| NI100..... | -60°C...+250°C |
| Entrée TC..... | B, E, J, K, L, N, R, S, T, U, W3, W5, Lr |
| Lin. R..... | 0 Ω...7000 Ω |
| Tension..... | -800...+800 mV |

FR Résistance linéaire.....

| | |
|------------------------------|-----------------------|
| Game de signal..... | 4...20 mA |
| Plage de signal min..... | 16 mA |
| Résistance de charge, Ω..... | ≤ (Valim-8,0 V)/0,023 |

FR Approbations

| | |
|------------------|--------------------------|
| DNV, Marine..... | TAA0000101 |
| EAC Ex..... | RU C-DK, HA65.B.00355/19 |

FR Compatibilité avec les normes:

| | |
|-------------|----------------|
| CEM..... | 2014/30/UE |
| RoHS..... | 2011/65/UE |
| ATEX..... | 2014/34/UE |
| EAC..... | TR-CU 020/2011 |
| EAC Ex..... | TR-CU 012/2011 |

DE WARNUNG

Folgende Maßnahmen sollten nur in spannungslosem Zustand des Gerätes und unter ESD-sicheren Verhältnisse durchgeführt werden: Installation, Montage und Demontage von Leitungen. Fehlersuche im Gerät und Reparaturen des Gerätes dürfen nur von PR electronics A/S vorgenommen werden.

DE WARNUNG

Benutzen Sie die Programmierschnittstelle Loop Link nicht im Ex Bereich. Zur Montage in klassifizierten Zonen müssen die Geräte nach den dazugehörigen Einba Zeichnungen installiert werden.

DE SICHERHEITSREGELN

Empfang und Auspacken
Packen Sie das Gerät aus, ohne es zu beschädigen, und kontrollieren Sie beim Empfang, ob der Gerätetyp Ihrer Bestellung entspricht. Die Verpackung sollte beim Gerät bleiben, bis dieses am endgültigen Platz montiert ist.

DE Umgebungsbedingungen

Direkte Sonneneinstrahlung, starke Staubentwicklung oder Hitze, mechanische Erschütterungen und Stöße sind zu vermeiden; das Gerät darf nicht Regen oder starker Feuchtigkeit ausgesetzt werden. Bei Bedarf muss eine Erwärmung, welche die angegebenen Grenzen für die Umgebungstemperatur überschreitet, mit Hilfe eines Kühlgebläses verhindert werden.

DE Installation

Das Gerät darf nur von qualifizierten Technikern angeschlossen werden, die mit den technischen Ausdrücken, Warnungen und Anweisungen in dieser Installationsanleitung vertraut sind und diese befolgen. Sollten Zweifel bezüglich der richtigen Handhabung des Gerätes bestehen, sollte man mit dem Händler vor Ort Kontakt aufnehmen. Sie können aber auch direkt mit PR electronics GmbH Kontakt aufnehmen.

Die Installation und der Anschluss des Gerätes haben in Übereinstimmung mit den geltenden Regeln des jeweiligen Landes bez. der Installation elektrischer Apparate zu erfolgen, u.a. bezüglich Leitungsquerschnitt, (elektrischer) Vor-Absicherung und Positionierung. Eine Beschreibung von Eingangs- / Ausgangs- und Versorgungsanschlüssen befindet sich im Produkthandbuch, das unter www.prellectronics.de gefunden und abgerufen werden kann.

DE Kalibrierung und Justierung

Während der Kalibrierung und Justierung sind die Messung und der Anschluss externer Spannungen entsprechend dieser Installationsanleitung auszuführen, und der Techniker muss hierbei sicherheitsmäßig einwandfreie Werkzeuge und Instrumente benutzen.

DE Reinigung

Das Gerät darf in spannungslosem Zustand mit einem Lappen gereinigt werden, der mit destilliertem Wasser leicht angefeuchtet ist.

DE PC-Programmierung des Systems 5300

Das Gerät wird für die jeweilige Aufgabe mit Hilfe eines PCs und PR electronics A/S Kommunikations-schnittstelle Loop Link konfiguriert. Es ist möglich, das Gerät sowohl mit als auch ohne angeschlossene Versorgungsschnittstelle zu konfigurieren, da die Kommunikationsschnittstelle die notwendige Versorgung für die Einstellung liefert. Die Kommunikationsschnittstelle ist galvanisch isoliert, sodass der Anschluss des PCs optimal geschützt ist. Die Kommunikation erfolgt in beiden Richtungen, sodass die Einstellung des Gerätes in den PC geholt, und die Einstellung im PC an das Gerät gesandt werden kann. Für diejenigen Anwender, welche die Einstellung nicht selbst vornehmen wollen, kann das Gerät nach folgenden Kundenspezifikationen konfiguriert geliefert werden: Eingangstyp, Messbereich, Fehlererkennung und Ausgangssignal.

DE Elektrische Daten

| | |
|-----------------------------------------|------------------------|
| Spezifikationsbereich..... | -40°C bis +85°C |
| Versorgungsspannung, 5335A & 5337A..... | 8,0...35 VDC |
| Verlustleistung, 5335A & 5337A..... | 25 mW...0,8 W |
| Versorgungsspannung, 5335D & 5337D..... | 8,0...30 VDC |
| Verlustleistung, 5335D & 5337D..... | 25 mW...0,7 W |
| Isolationsspannung, Test / Betrieb..... | 1,5 kVAC / 50 VAC |
| Kalibreringstemperatur..... | 20...28°C |
| Luftfeuchtigkeit..... | < 95% RF (nicht kond.) |
| Maß..... | Ø44 x 20,2 mm |
| Schutzart (Gehäuse / Anschluss)..... | IP68 / IP00 |

DE Eingangstypen

| | |
|-----------------|------------------------------------------|
| Pt100..... | -200°C...+850°C |
| NI100..... | -60°C...+250°C |
| TE-Eingang..... | B, E, J, K, L, N, R, S, T, U, W3, W5, Lr |
| Lin. R..... | 0 Ω...7000 Ω |
| Spannung..... | -800...+800 mV |

DE Stromausgang

| | |
|------------------------------|-------------------------|
| Signalbereich..... | 4...20 mA |
| Min. Signalbereich..... | 16 mA |
| Belastungswiderstand, Ω..... | ≤ (Vversorg-8,0V)/0,023 |


DE Zulassungen

| | |
|------------------|--------------------------|
| DNV, Marine..... | TAA0000101 |
| EAC Ex..... | RU C-DK, HA65.B.00355/19 |

DE Eingehaltene Behördenvorschriften:

| | |
|-------------|----------------|
| EMV..... | 2014/30/EU |
| RoHS..... | 2011/65/EU |
| ATEX..... | 2014/34/EU |
| EAC..... | TR-CU 020/2011 |
| EAC Ex..... | TR-CU 012/2011 |

- DK** Indgangssignaler
- UK** Input signals
- FR** Signaux d'entrée
- DE** Eingangssignale

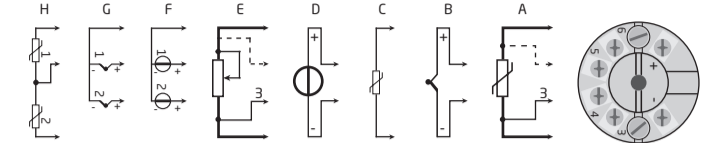


| | DK | UK | FR | DE |
|---|----------------------------|---------------------------|-------------------------|---------------------------|
| A | RTD | RTD | RTD | WTH |
| B | TC | TC | TC | TE |
| C | CJC | CJC | CSF | CJC |
| D | Spænding | Voltage | Tension | Spannung |
| E | Lin R | Lin R | Lin R | Lin R |
| F | mV, differens eller middel | mV, difference or average | mV, différence ou moyen | mV, Differenz oder Mittel |
| G | | | | |


ATEX-installation drawing 5335QA01-V5R0

For safe installation of 5335D or 5337D the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate DEKRA 20ATEX0108 X

Marking  II 1 G Ex ia IIC T6...T4 Ga
II 2 D Ex ia IIIC Db
I M1 Ex ia I Ma

Standards EN IEC 60079-0: 2018, EN 60079-11: 2012

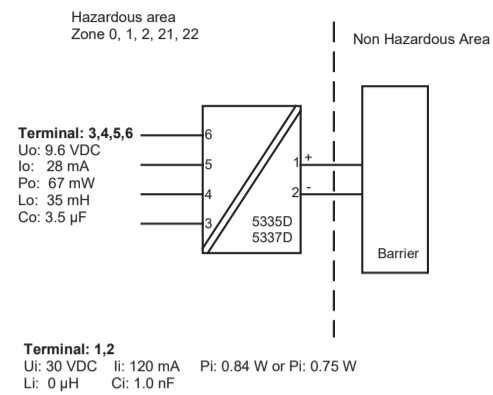

| Temperature Class | Ambient temperature range | |
|-------------------|---------------------------|----------------|
| | Pi: 0.84 W | Pi: 0.75 W |
| T6 | -40°C to +47°C | -40°C to +50°C |
| T5 | -40°C to +62°C | -40°C to +65°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

Installation notes

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to EN 60529, and that is suitable for the application and correctly installed.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga or Ma, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Db, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to EN 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP54 according to EN 60529, and that is suitable for the application and correctly installed. Ambient temperature range: -40°C to +85°C.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.


For an ambient temperature $\geq 60^\circ\text{C}$, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The sensor circuit is not infallibly galvanically isolated from the input circuit. However, the galvanic isolation between the circuits is capable of withstanding a test voltage of 500 VAC for 1 minute.

ATEX-installation drawing 5335QA02-V5R0

For safe installation of 5335A and 5337A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

ATEX Certificate DEKRA 20ATEX0109 X

Marking  II 3 G Ex nA [ic] IIC T6 ... T4 Gc
II 3 G Ex ec [ic] IIC T6 ... T4 Gc
II 3 G Ex ic IIC T6 ... T4 Gc
II 3 D Ex ic IIIC Dc

Standards EN 60079-0: 2018, EN 60079-11: 2012, EN 60079-15: 2010, EN 60079-7:2015 +A1: 2018

| Terminal 3,4,5,6 | Terminal 1,2 | Terminal 1,2 | Terminal 1,2 |
|----------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------|---------------------------------------------|
| Ex ic IIC, Ex ic IIIC | Ex ic IIC, Ex ic IIIC | Ex ic IIC, Ex ic IIIC | Ex nA, Ex ec |
| Uo: 9.6 V Io: 28 mA Po: 67 mW Lo: 35 mH Co: 3.5 µF | Ui = 35 V Ii = 110 mA Ci = 1 nF Li = 0 µH | Ui = 24 V Ii = 260 mA Ci = 1 nF Li = 0 µH | Umax \leq 35 VDC or Umax \leq 24 VDC |

| Ex ic IIC, Ex ic IIIC Temperature Class | Ambient temperature range | |
|-----------------------------------------|---------------------------|----------------|
| | Ui=35 V | Ui=24 V |
| T6 | -40°C to +54°C | -40°C to +63°C |
| T5 | -40°C to +69°C | -40°C to +78°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

| Ex ec, Ex nA Temperature Class | Ambient temperature range | |
|--------------------------------|---------------------------|----------------|
| | Vmax=35 V | Vmax=24 V |
| T6 | -40°C to +43°C | -40°C to +55°C |
| T5 | -40°C to +85°C | -40°C to +85°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

Installation notes

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex ic, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to EN 60259, and that is suitable for the application and correctly installed.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Dc, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to EN 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the equipment shall only be used in an area of not more than pollution degree 2, as defined in IEC 60664-1.


IECEx-installation drawing 5335QI01-V5R0

For safe installation of 5335D or 5337D the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 20.0063X

Marking Ex ia IIC T6...T4 Ga
Ex ia IIIC Db
Ex ia I Ma

Standards IEC 60079-0: 2017, IEC 60079-11: 2011

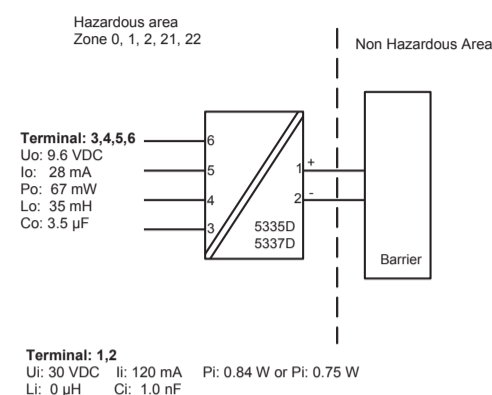

| Temperature Class | Ambient temperature range | |
|-------------------|---------------------------|----------------|
| | Pi: 0.84 W | Pi: 0.75 W |
| T6 | -40°C to +47°C | -40°C to +50°C |
| T5 | -40°C to +62°C | -40°C to +65°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

Installation notes

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to IEC 60529, and that is suitable for the application and correctly installed.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ga or Ma, and if the enclosure is made of aluminum, it must be installed such, that ignition sources due to impact and friction sparks are excluded.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Db, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to IEC 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Ma, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP54 according to IEC 60529, and that is suitable for the application and correctly installed. Ambient temperature range: -40°C to +85°C.

Cable entries and blanking elements shall be used that are suitable for the application and correctly installed.

For an ambient temperature $\geq 60^\circ\text{C}$, heat resistant cables shall be used with a rating of at least 20 K above the ambient temperature.

The sensor circuit is not infallibly galvanically isolated from the input circuit. However, the galvanic isolation between the circuits is capable of withstanding a test voltage of 500 VAC for 1 minute.

IECEx-installation drawing 5335QI02-V5R0

For safe installation of 5335A and 5337A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area. Year of manufacture can be taken from the first two digits in the serial number.

Certificate IECEx DEK 20.0063X

Marking Ex nA [ic] IIC T6 ... T4 Gc
Ex ec [ic] IIC T6 ... T4 Gc
Ex ic IIC T6 ... T4 Gc
Ex ic IIIC Dc

Standards IEC 60079-0: 2017, IEC 60079-11: 2011, IEC 60079-15: 2010, IEC 60079-7:2017

| Terminal 3,4,5,6 | Terminal 1,2 | Terminal 1,2 | Terminal 1,2 |
|----------------------------------------------------------------|----------------------------------------------------|----------------------------------------------------|---------------------------------------------|
| Ex ic IIC, Ex ic IIIC | Ex ic IIC, Ex ic IIIC | Ex ic IIC, Ex ic IIIC | Ex nA, Ex ec |
| Uo: 9.6 V Io: 28 mA Po: 67 mW Lo: 35 mH Co: 3.5 µF | Ui = 35 V Ii = 110 mA Ci = 1 nF Li = 0 µH | Ui = 24 V Ii = 260 mA Ci = 1 nF Li = 0 µH | Umax \leq 35 VDC or Umax \leq 24 VDC |

| Ex ic IIC, Ex ic IIIC Temperature Class | Ambient temperature range | |
|-----------------------------------------|---------------------------|----------------|
| | Ui=35 V | Ui=24 V |
| T6 | -40°C to +54°C | -40°C to +63°C |
| T5 | -40°C to +69°C | -40°C to +78°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

| Ex ec, Ex nA Temperature Class | Ambient temperature range | |
|--------------------------------|---------------------------|----------------|
| | Vmax=35 V | Vmax=24 V |
| T6 | -40°C to +43°C | -40°C to +55°C |
| T5 | -40°C to +85°C | -40°C to +85°C |
| T4 | -40°C to +85°C | -40°C to +85°C |

Installation notes

If the enclosure is made of non-metallic plastic materials, electrostatic charges on the transmitter enclosure shall be avoided.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex ic, the transmitter shall be mounted in an enclosure that provides a degree of protection of at least IP20 according to IEC 60259, and that is suitable for the application and correctly installed.


If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Dc, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP5X according to IEC 60079-0, and that is suitable for the application and correctly installed. The surface temperature of the outer enclosure is +20 K above the ambient temperature, determined without a dust layer. Ambient temperature range: -40°C to +85°C.

If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the transmitter shall be mounted in a separately certified enclosure that provides a degree of protection of at least IP54 according to IEC 60079-0, and that is suitable for the application and correctly installed.


If the transmitter is installed in an explosive atmosphere requiring the use of equipment protection level Gc and applied in type of protection Ex nA or Ex ec, the equipment shall only be used in an area of not more than pollution degree 2, as defined in IEC 60664-1.

FM Installation Drawing 5300Q502 V3R0

Model 5331D, 5332D, 5333D and 5343B

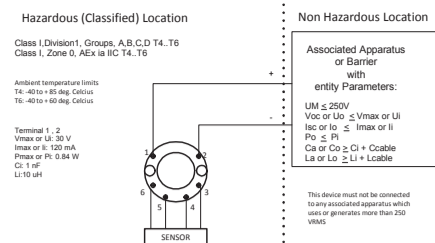

Model 5335D, 5337D

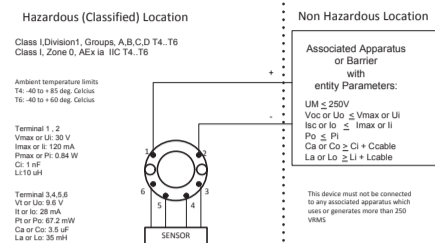

The entity concept

The Transmitter must be installed according to National Electrical Code (ANSI-NFPA 70) and shall be installed with the enclosure, mounting, and spacing segregation requirement of the ultimate application.

Equipment that is FM-approved for intrinsic safety may be connected to barriers based on the ENTITY CONCEPT. This concept permits interconnection of approved transmitters, meters and other devices in combinations which have not been specifically examined by FM, provided that the agency's criteria are met. The combination is then intrinsically safe, if the entity concept is acceptable to the authority having jurisdiction over the installation.

The entity concept criteria are as follows:

The intrinsically safe devices, other than barriers, must not be a source of power. The maximum voltage $U_i(V_{max})$ and current $I_i(I_{max})$, and maximum power $P_i(P_{max})$, which the device can receive and remain intrinsically safe, must be equal to or greater than the voltage (U_o or V_{oc} or V_i) and current (I_o or I_{sc} or I_i) and the power P_o which can be delivered by the barrier.


The sum of the maximum unprotected capacitance (C_i) for each intrinsically device and the interconnecting wiring must be less than the capacitance (C_a) which can be safely connected to the barrier.

The sum of the maximum unprotected inductance (L_i) for each intrinsically device and the interconnecting wiring must be less than the inductance (L_a) which can be safely connected to the barrier.

The entity parameters U_o, V_{oc} or V_i and I_o, I_{sc} or I_i , and C_a and L_a for barriers are provided by the barrier manufacturer.


NI Field Circuit Parameters

Model 5331D, 5332D, 5333D, 5335D, 5337D and 5343B

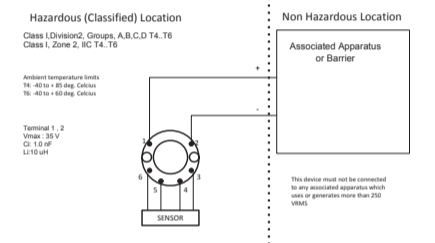

CSA Installation drawing 5337QC02 - V1R0

For safe installation of the 5335A and 5337A the following must be observed. The module shall only be installed by qualified personnel who are familiar with the national and international laws, directives and standards that apply to this area.

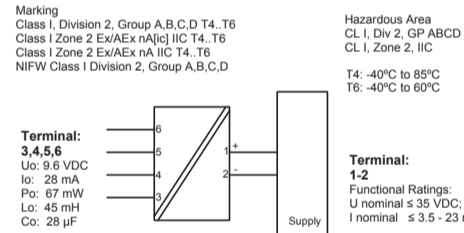

NI Installation instructions

The transmitter must be installed in an enclosure providing a degree of protection of at least IP54 according to IEC60529 that is suitable for the application and is correctly installed. Cable entry devices and blanking elements shall fulfill the same requirements. If the enclosure is made of non-metallic materials or of painted metal, electrostatic charging shall be avoided. Use supply wires with a rating of at least 5 kV above the ambient temperature. Supply from a Class 2 Power Supply with Transient protection or equivalent.


WARNING: Substitution of components may impair suitability for Class I, Division 2. AVERTISSEMENT: la substitution de composants peut nuire à l'aptitude à la Classe I, Division 2.

WARNING: Do not disconnect equipment unless power has been switched off or the area is known to be safe. AVERTISSEMENT: Ne débranchez pas l'équipement sauf si l'alimentation a été coupée ou si la zone est connue pour être sûre.

Non incandive field wiring installation

The non incandive field wiring circuit concept allows interconnection of Nonincandive Field Wiring Apparatus with Associated Nonincandive Field Wiring Apparatus or Associated Intrinsically Safe Apparatus or Associated Apparatus not specially examined in combination as a system using any of the wiring methods permitted for unclassified locations. Voc \leq Vmax, Ca \geq Ci + Ccable, La \geq Li + Lcable.

CSA Installation drawing 5337QC03 - V4R0

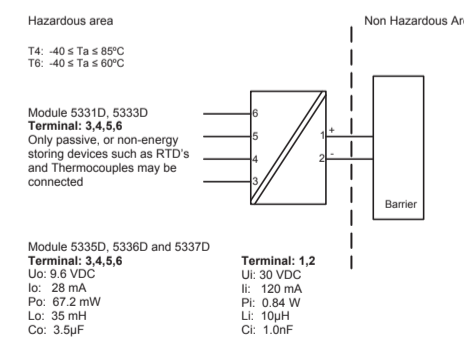

CLASS 2258 04 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe Entry - For Hazardous Locations
Class I, Division 1, Groups A, B, C and D
Ex ia IIC, Ga

CLASS 2258 84 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe Entry - For Hazardous Locations - Certified to US Standards
Class I, Division 1, Groups A, B, C and D
Class I, Zone 0, AEx ia IIC, Ga

Warning: Substitution of components may impair intrinsic safety.

The transmitters must be installed in a suitable enclosure to meet installation codes stipulated in the Canadian Electrical Code (CEC) or for US the National Electrical Code (NEC).

Instalação INMETRO 5335QB01-V8R0


Para uma instalação segura, o seguinte deve ser observado. O módulo só deve ser instalado por pessoal qualificado e familiarizado com as leis, diretrizes e normas nacionais e internacionais aplicáveis a essa área.

Certificado DEKRA18.0002X

Normas ABNT NBR IEC 60079-0:2013 Versão corrigida 2: 2016
ABNT NBR IEC 60079-11:2013 : Versão corrigida 2017
ABNT NBR IEC 60079-15:2012

5335D, 5337D:

Notas Ex ia IIC T6... T4 Ga
Ex ia IIIC Db
Ex ia I Ma

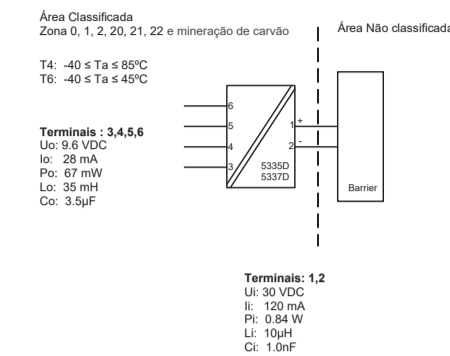

Instruções Gerais de Instalação.

O circuito do sensor não é galvanicamente infalivelmente isolado do circuito de saída de alimentação. No entanto, o isolamento galvanico entre os circuitos é capaz de suportar uma tensão de teste de 500Vac durante 1 minuto. Se o invólucro for feito de alumínio, ele deve ser instalado de tal forma que, mesmo em caso de incidentes raros, fontes de ignição devidas a impactos e fricção, faíscas sejam excluídas. Se o invólucro for feito de materiais não metálicos ou metais pintados, o carregamento eletrostático deve ser evitado.

Para instalações com uma atmosfera de gás potencialmente explosiva, a seguinte instrução se aplicará:

O transmissor deverá ser montado em um gabinete de formato tipo B de acordo com a norma DIN43729 ou equivalente que possibilite um grau mínimo de proteção IP20 de acordo com a ABNT NBR IEC60529 adequado para a aplicação e instalado corretamente.

Para instalação em uma atmosfera de poeira potencialmente explosiva, as seguintes instruções se aplicam:

O transmissor deve ser montado em um invólucro metálico B de acordo com DIN43729 ou equivalente que esteja fornecendo um grau de proteção de pelo menos IP6X de acordo com a ABNT NBR IEC 60529 que seja adequado para a aplicação e instalado corretamente. Entradas de cabos e buíças de fechamento devem ser usados adequados à aplicação e instalados corretamente.

Para instalação em minas, as seguintes instruções se aplicam:

O transmissor deve ser montado em um invólucro de metal que forneça um grau de proteção de pelo menos IP6X de acordo com a ABNT NBR IEC 60529 e seja adequado para a aplicação e instalado corretamente. Entradas de cabos e buíças de fechamento devem ser usados adequados à aplicação e instalados corretamente. Se o invólucro for feito de alumínio, ele deve ser instalado de tal forma que, mesmo em caso de incidentes raros, fontes de ignição devidas a impactos e fricção, faíscas sejam excluídas. Se o invólucro for feito de materiais não metálicos ou metais pintados, o carregamento eletrostático deve ser evitado. O recinto não deve conter mais de massa a) 15% no total de alumínio, magnésio, titânio e zircônio e b) 7,5% no total de magnésio, titânio e zircônio.

5335A, 5337A:

Notas Ex nA [ic] IIC T6... T4 Gc
Ex ic IIC T6... T4 Gc
Ex ic IIIC Dc

| T4: -40 \leq Ta \leq 85°C | Terminal: 3,4,5,6 | Terminal: 1,2 |
|-------------------------------|---------------------------------------------------------------|----------------------------------|
| T6: -40 \leq Ta \leq 60°C | Ex nA [ic] | Ex nA [ic] |
| | Uo: 9.6 V Io: 28 mA Po: 67 mW Lo: 45 mH Co: 28 µF | U \leq 35 VDC I = 4 - 20 mA |